



Lock Better. Live Better.


## Smart Lock User Manual




### Special Attention:

1. Mechanical keys please keep outdoor, just in case keys lock in doors.
2. Please change the batteries when notified by low wattage alarm.
3. Reading this manual carefully before installation, and keep it for future reference.

# 1. Lock Structure






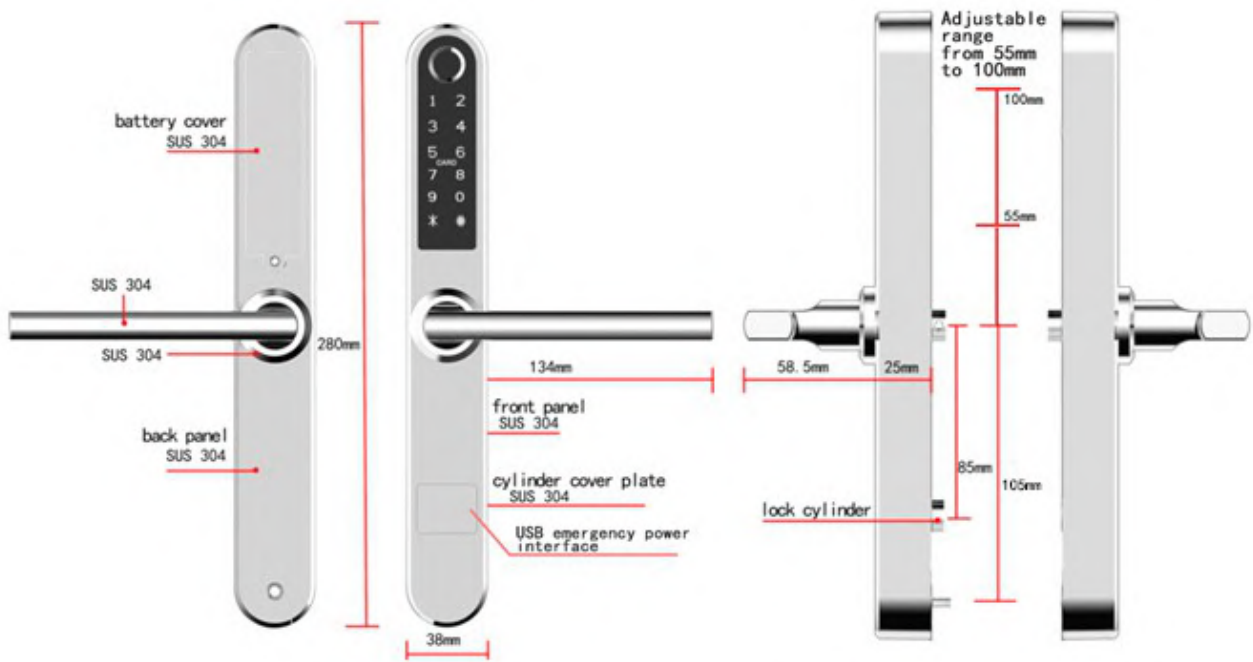


# 2. Mortise

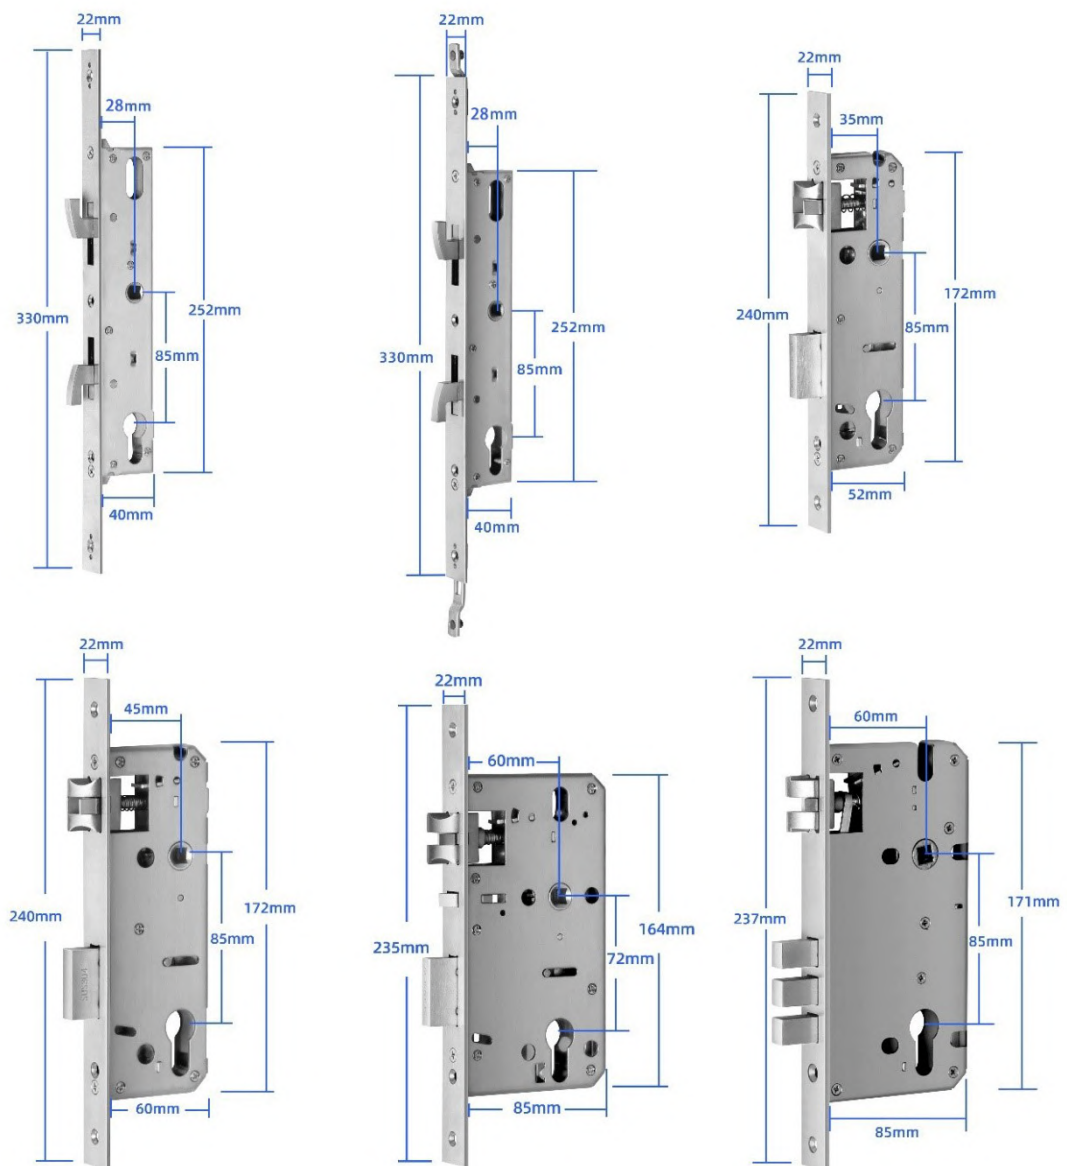


### 3. Installation

#### 3.1 Installation Diagram

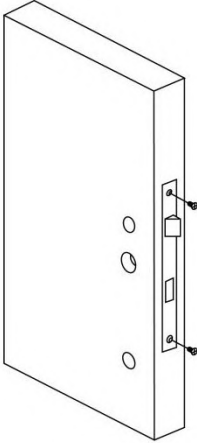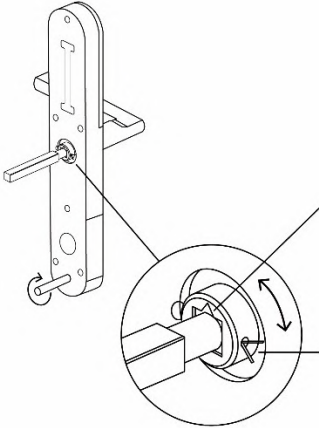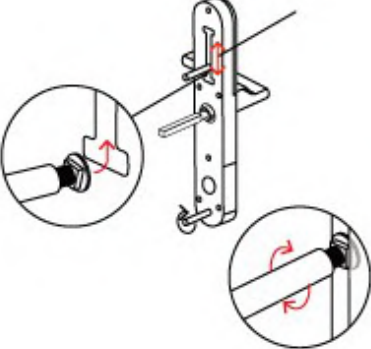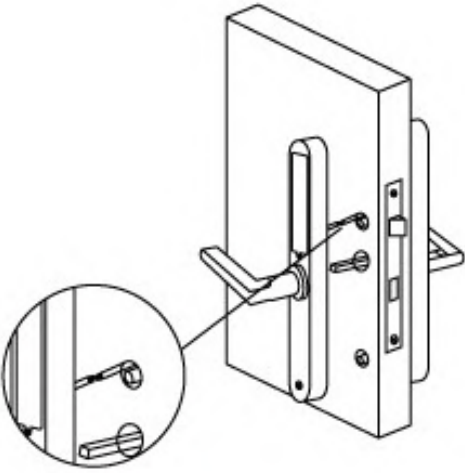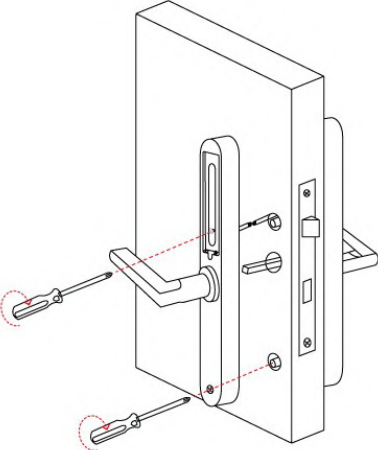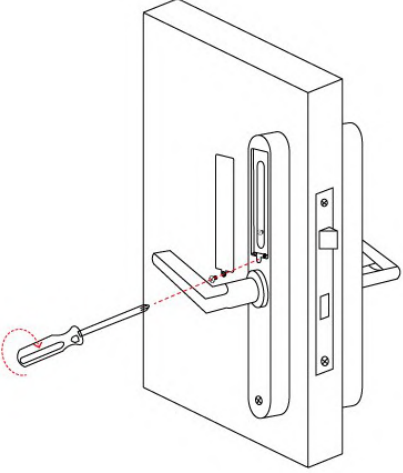Step 1 Install Mortise	Step 2 Install Square Shaft
	 <p>If the handle point to left, turn the triangle point to left If the handle point to right, turn the triangle point to right</p> <p>Insert the bolt into the hole and bend it's front end to fix the square shaft</p>
Step 3 Install Sliding Screw Casing	Step 4 Connect Front and Back Panels
 <p>The screw casing place is adjustable from 55mm to 100mm far from the square shaft.</p> <p>Depending on the location of the hole-drilling or the old door hole..</p>	
Step 5 Install Back Panel	Step 6 Install the Battery
	

### 3.2 Turn the handle


**Notice:** The arrow must point to the same direction as the changed direction of the handle, remember to adjust the direction of the arrow after turn the handle

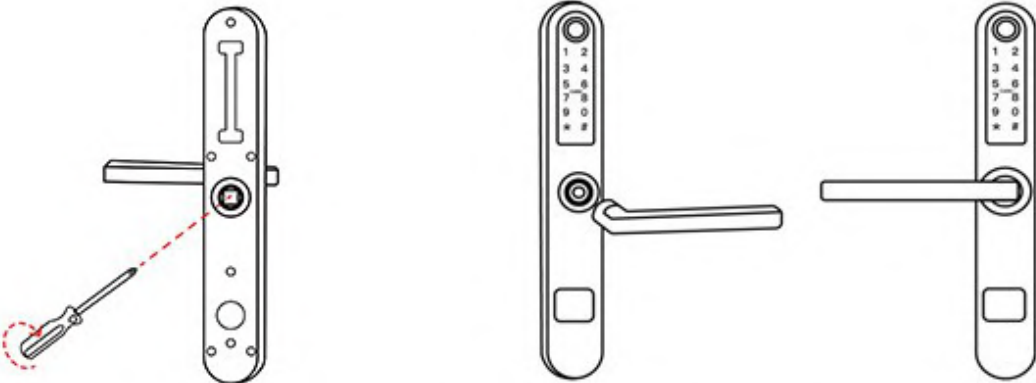

1、 Turn the handle on the front panel  
Loosen the inner hexagon screw of the handle counterclockwise

2、 Remove the handle

3、 After adjusting the direction of the handle, insert it into the handle seat and re-lock the hexagon screw of the handle to the complete the turning

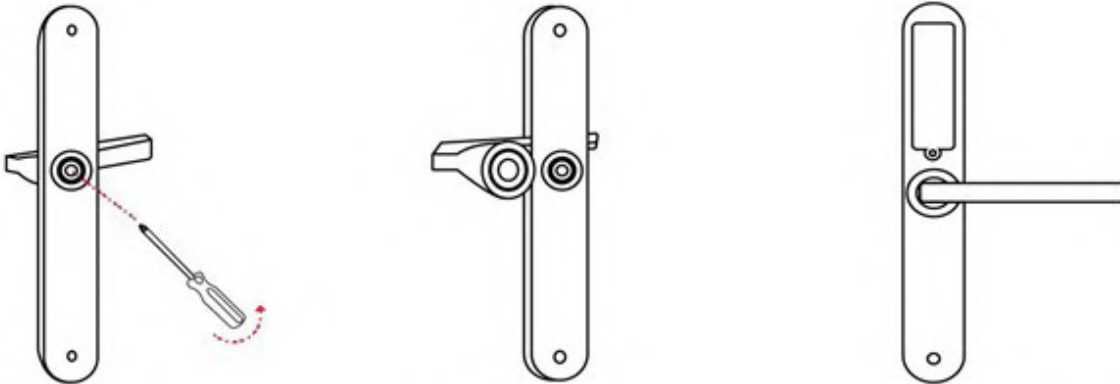

1、 Turn the handle on back panel  
Loosen the inner hexagon screw of the handle counterclockwise

2、 Remove the handle

3、 After adjusting the direction of the handle, insert it into the handle seat and re-lock the hexagon screw of the handle to the complete the turning

## 4. Specifications

Suitable for Models	S31B Only
Materials	SS304 (stainless steel)
Front Panel Lock Size	280*38*25mm
Back Panel Lock Size	280*38*25mm
Lock Weight	2.5KG
Unlocking way	Bluetooth Fingerprint Password Card Mechanical key
Colour	Silver Black Golden Gray
Doors Applicable	Aluminum door Wooden door Sliding door Swing door
Working Voltage	6V/4x AAA Batteries
Door Thickness to Fit	30-80mm
Data Capacity	Unlimited
Working Temperature	-30°C-60°C
Working Humidity	20%-90%
Low Wattage Alarm	Less than 4.5V

### System Initialization

Open the cover of the battery, long press the "Reset" button on the back panel for 5s, press "000#", and the initialization is complete



## 5.Registration




### 5.1 Connect lock to the phone

- 1) Android mobile phone, please scan the left QR code as above
- 2) Apple mobile phone, please scan the right QR code as above
- 3) You can also search for AUSLOCK in the APP store or Google play for download
- 4) Register a new account (phone number or email) or login with an existing account.
- 5) Touch the locks screen to light up the buttons, on App click "+ Add Lock"
- 6) The lock nearby will appear on the phone screen, Click "+"
- 7) Re-name the lock
- 8) The lock is added successful


1-1

1-2


1-3

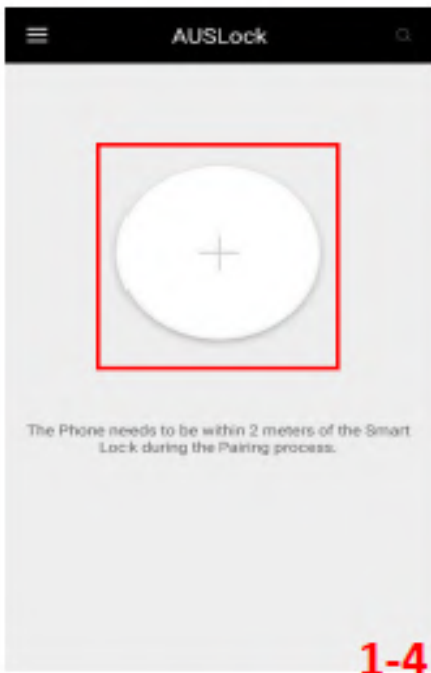


1-4

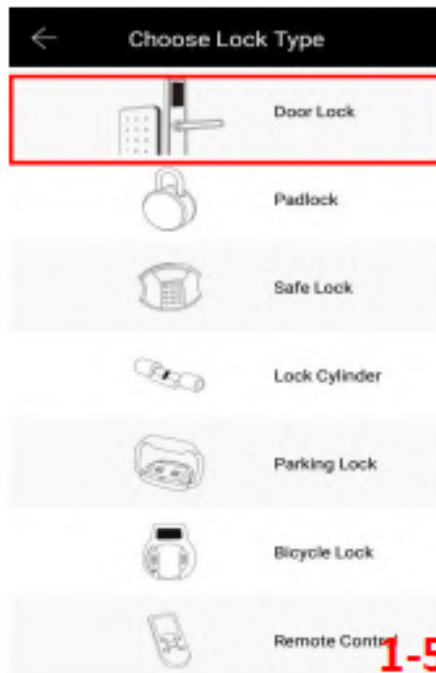


1-5

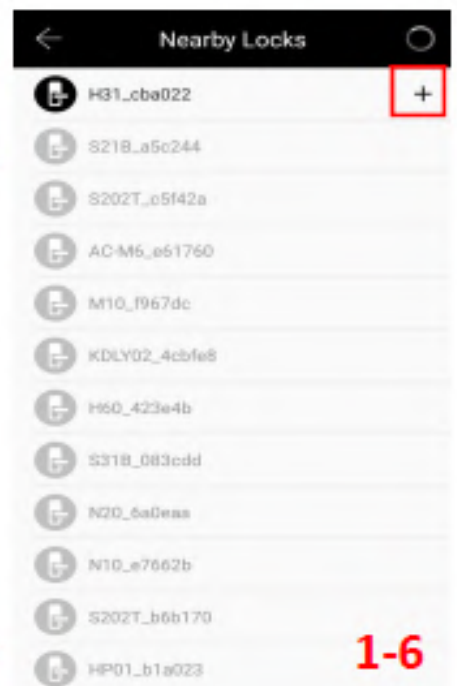

1-6

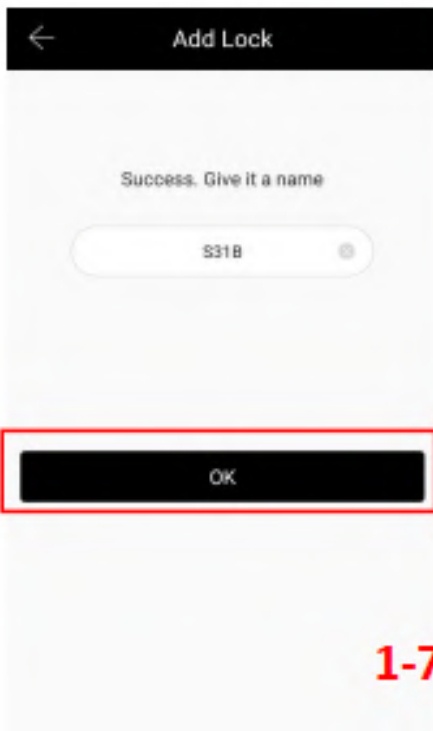


1-7

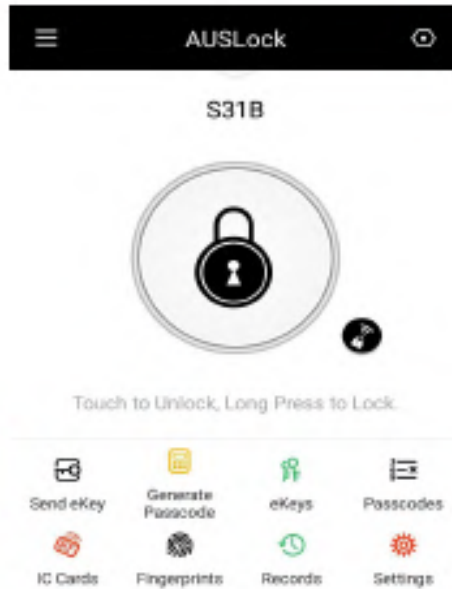


1-8

## 5.2 User Management


### 5.2.1 Bluetooth management

After mobile phone and door lock connected, Click "" as show as figure2-1 to unlock. (Make sure the phone is within 5 meters from the door lock)


### 5.2.2 Remote control management(Optional)

After confirming that your phone and door lock are connected to the gateway, Click "" as show as figure 2-1 to unlock. You can unlock it anywhere you have a network connection. (How to set up the gateway to connect to your phone refer to step 5.3)


### 5.2.3 e-Key management

Click on the " Send eKey" as shown in figure 2-1,you can send the eKey to other users of AUSLOCK to authorize the unlock ( the receiver must be download the APP and register an account ) → Enter recipient's account of AUSLOCK, set the name and effective time of the eKey as shown in figure 2-2→ Send→ The recipient's account has Bluetooth unlock permission


### 5.2.4 The Admin password management

Click " Settings" as shown in figure 2-1→ See Basic → Admin Passcode as shown in finger2-3→ input Passcode on the keypad of lock → “#”to unlock.



### 5.2.5 Dynamic password management

Click " Generate Passcode" as shown in finger 2-1→ finger 2-4 You can set the effective time and effective number of passwords→ Generate password→ Input password to unlock.

### 5.2.6 Unlock records


Click " Records" as shown in finger 2-1→ you can query your unlock record as shown in finger 2-5

## 5.2.7 IC Cards management


Click "  " as shown in finger 2-1→Click "  "→Add IC Cards as finger 2-6



2-1

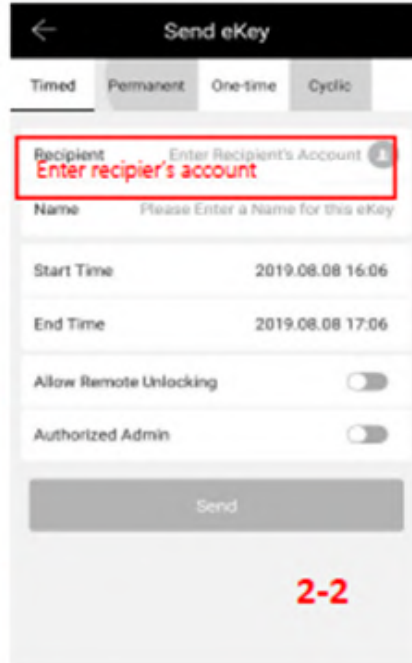


2-2

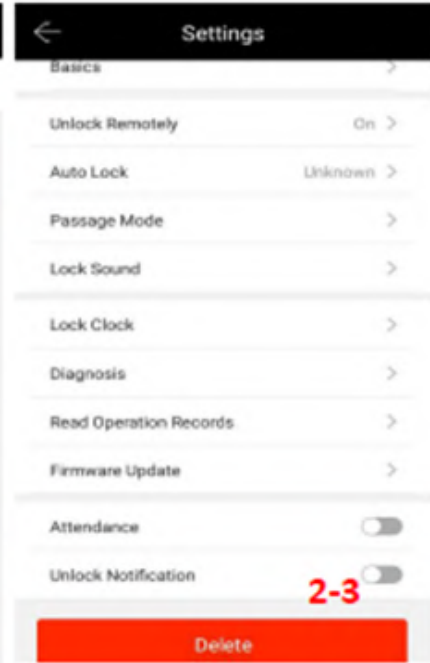


2-3



2-4

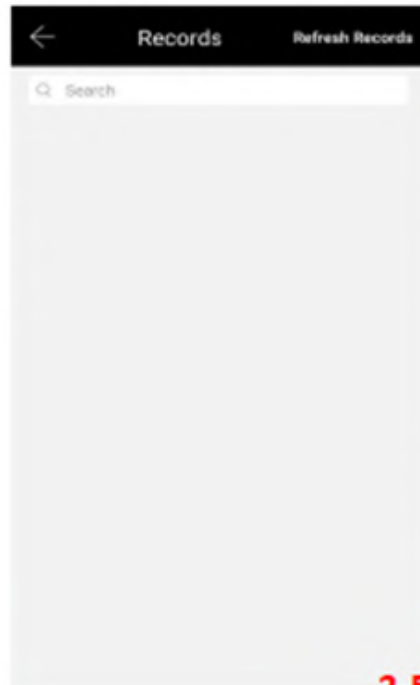

2-5

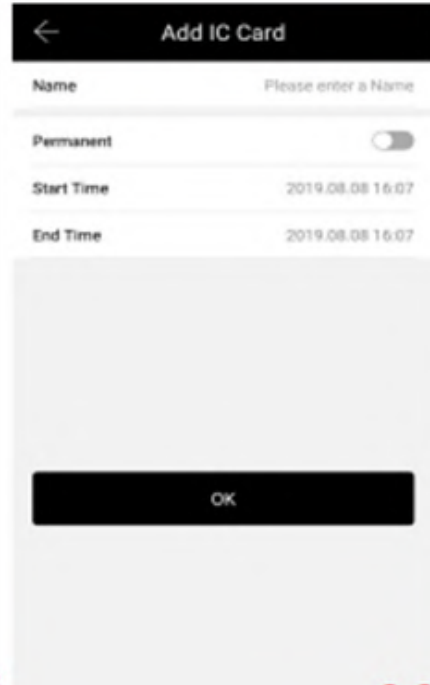




2-6

## 5.3 Add Gateway(Optional)

# Light Status




When the gateway is powered on:


-  Light flashes alternately in red and blue: Stand-by mode, ready for pairing
-  Blue light: Working mode
-  Red light: Network failure

### Pair the Gateway with APP

1 Activate the APP

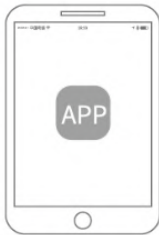


2 Press "☰"

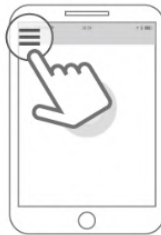


3 Select [Gateway]



4 Select [G2]

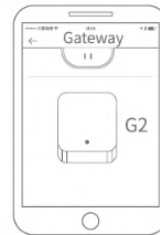

 5 Plug in the gateway and power it on, while the light flashes alternately in red and blue



6 Press "+" sign



7 Add Gateway






 









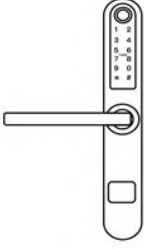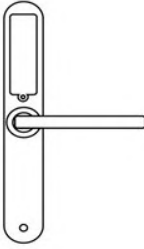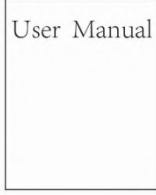


8 Select the network and fill in the password

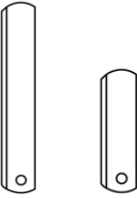

9 Add complete

▲ Notice: If times out, please power off and try it again.

# Packing List

Picture				
Name	Front Panel	Back Panel	User Manual	Mortise
Quantity	1	1	1	1
Picture				
Name	Strike	Pointed Screw	Mechanical Key	Card
Quantity	1	4	2	3
Picture				
Name	Square Shaft	Spring	Fixing Screws 1	Sliding Screw Casing
Quantity	2	1	3	3
Picture				
Name	Waterproof Rubber Plates	Sliding Screw	Fixing Screws 2	Gateway
Quantity	2	2	4	1(Option)

# Guarantee



(To Validate warranty, below details must be filled by customer and emailed back to Auslock within 30 days or else Auslock may not offer full services ([au@auslock.net](mailto:au@auslock.net))

Customer Full Name : \_\_\_\_\_

Customer Contact No. : \_\_\_\_\_

Place of Purchase (store) : \_\_\_\_\_

Purchase Date : \_\_\_\_\_

Product Name : \_\_\_\_\_

Product Model : \_\_\_\_\_

Note:

- 1) Please keep this card so that you can use it when you need warranty service.
- 2) We provide you with a one-year warranty from the date of purchase.
- 3) This warranty service is valid for customers in any country in the world.