

Electric Screen Operation Manual

1. Power cords connector: Before connecting the electric screen to electric power supply, please properly connect GX16 controller follows:
 - a) Plug the four-pin female connector at one end of the connector at the right side of the screen case; then plug the four-pin female connector at the other side of the connect cable into the four-pin male connector of the GX16 Controller. Turn the screw clock-wise to tight the connection
 - b) Plug the three-pin female connector of the power cord into the three-pin male connector of the GX16 , turn the screw clockwise to tight the connection.
 - c) Plug the power cord into the electric outlet, (please make sure the electric voltage is correct). The indicator light of the Controller should be on to indicator the power is on.
2. How to operate the screen:
 - a) Stretching out projector screen. Press DOWN key of the switch and the screen will automatically stretch down and the stop when it is fully stretched out.
 - b) Rolling back projector screen. Press the UP key of the switch and the screen will automatically roll up into the metal drum and stop automatically when the screen is rolled up.
 - c) Stopping projector screen. Press STOP of switch to stop the screen and it can be stopped at any position.
 - d) Adjusting the viewing area of the screen: using a screen driver to adjust the viewing area of the diagram on the case cover at the right side of the screen case.
3. Notice:
 - a) The switch should be positioned at STOP when the screen is not in use.
 - b) Before rolling back the screen, please make sure that there is no insect, dust or other object on the screen.
 - c) The screen can be rolled up and down continually, but continuous time of rolling up and down should not exceed 5 minutes to prevent overheat of the motor. In case of continuous use necessary, you should wait until the motor cools down.
4. Faults shooting and adjustment:

If it doesn't work well when handle control operates. Please check the following items:

 - a) Check power supply whether to have electricity and whether fuse is broken.
 - b) Check whether the line connects exactly.
 - c) Check the connect line if move and shed off with break the line.
 - d) Check limited switch if normal, whether it has already arrived or not.
5. Suggested installation method

Note: When fixing and installing the screen, ensure that the two ends of the screen keep level.

 - a) Wall installation: Let the screen get into the hanging hole as shown in picture.
 - b) Ceiling installation: Hook the D-shape hook on the iron hook on the ceiling as shown in picture.
 - c) Fixing wall bracket (special brackets are suggested.) As shown in picture.
 - d) Covering: Adequate space for covering the screen as shown in picture.

