


HWTS1 WIFI WIRING INSTRUCTIONS

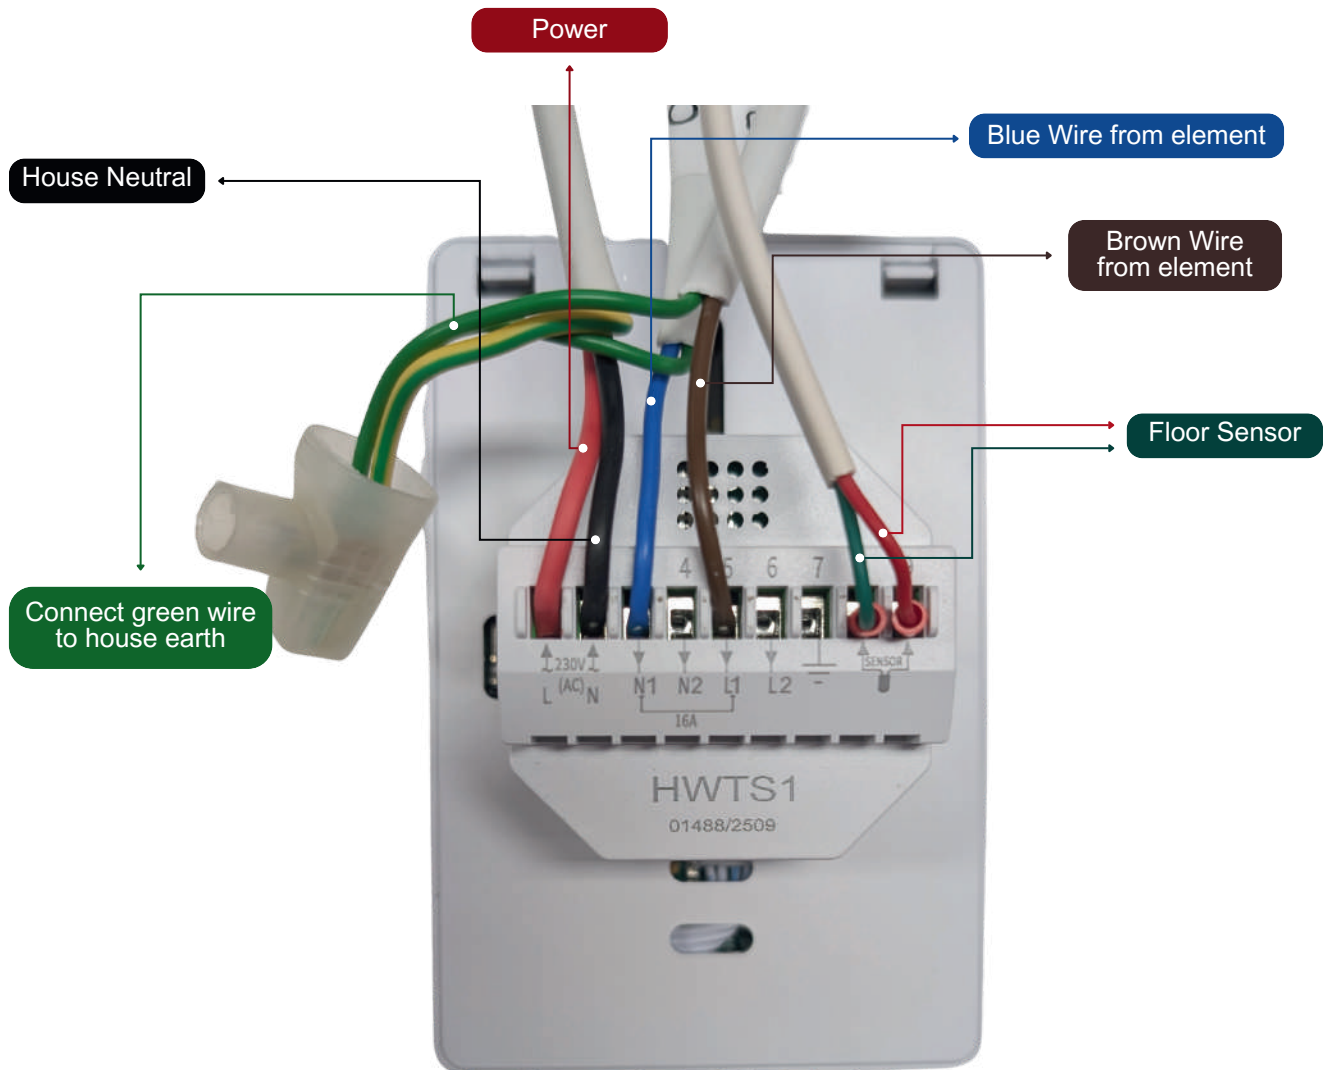

Step 1: Insert a small flathead screwdriver into the slot at the bottom of the screen. Gently separate the front from the back. Carefully unplug the ribbon connector.

Step 2: Connect the Thermostat according to the Wiring Instructions.

Step 3: Mount and reassemble the Thermostat: Screw the thermostat to the fixing plate in the holes provided.

Step 4: Return the face plate to its original position by pressing firmly.